

Reagan Medium Two Tier Chandelier

Item # CHC 5903

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING***SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.


INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

- -----
- 1. Carefully remove all parts from the box.
- Provide a 1/4" IPS pipe with one end securely mounted to a beam or a structural member.
 The other end should protrude through the center of the outlet box as shown.
- Install the threaded nipple (B) into the support pipe and adjust overall length to allow the canopy ring to hold the canopy flush to the ceiling.
- 4. Put canopy (D) flush to the ceiling, and secure with collar ring (E).
- 5. With the fixture desired height, shorten the chain (F) as needed using a pair of chain pliers.
- Open the chain quick link, then attach the chain quick link to the ceiling loop (C). Secure the chain quick link.
- Open the chain quick link, then attach the chain quick link to the fixture top loop (G). Secure the chain quick link.
- Gently set the arm (J) to the center hub (I) and secure with the spring clip (L).Check that the arms are spaced evenly before final tightening.
- Gently set the arm (K) to the center hub (I) and secure with the spring clip (L).Check that the arms are spaced evenly before final tightening.
- 10. Repeat above steps until assembly all arms.
- Connect the neutral wire (ribbed) from the arms to the fixture neutral wires (ribbed) using wire nut (M).
- Connect the hot wire (smooth, marks with words) from the arms to the fixture hot wires (smooth, marks with words) using wire nut (M).
- 13. Wrap all connections individually with electrical tape.
- 14. Attach the hub gap (N) to the bottom of the center hub (I) and secure with lock nut (O) with using the wrench (Q).

VISUAL COMFORT & CO. Est. 1987

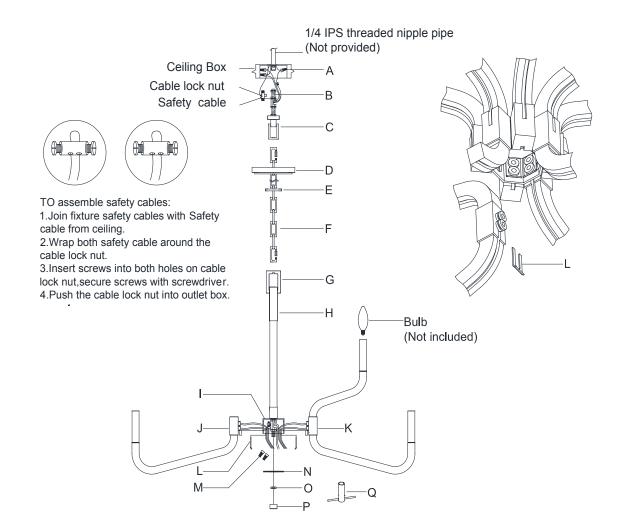

Reagan Medium Two Tier Chandelier

Item # CHC 5903

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING***SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

- 15. Thread the finial (P) to the bottom of the hub (I).
- 16. Weave the power supply cord and the ground wire through the chain (F).
- When you reach the canopy and collar loop (C), measure the wires then cut. Be certain to leave enough to connect inside of the outlet box.
- 18. Strip the insulation back on the two power supply wires about 5/8".
- 19. Loosen the collar ring (E) and slip down the canopy (D) on the chain (F) carefully.
- 20. Twist the power supply and ground wire together and push through the center hole of the collar loop (C).
- 21. Connect the fixture ground (bare) wire with the ground wire from the junction box using wire nut (A). If your house does not have ground wire, then attach this wire to the green grounding screw inside of the junction box.

IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.

- 22. Connect the fixture Neutral wire (ribbed) with the neutral wire (usually white) from the junction box using wire nut (A).
- 23. Connect the fixture Hot wire (smooth, marks with words) with the hot wire (usually black) from the junction box using wire nut (A).

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

- 24. Tuck these wire connections neatly into the junction box to secure.
- 25. Put canopy (D) flush to the ceiling, and secure with collar ring (E).
- 26. Insert bulbs (not included) into the sockets.
- 27. Installation is complete, turn on power at fuse or circuit breaker.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.

VISUAL COMFORT & CO. EST. 1987